



NetLinx Module Interface Specification

for a

NEC

P Series Projector

(NP-P240X and others)

TABLE OF CONTENTS

Introduction3

Overview3

Implementation3

Command Interface5

String Feedback.....8

Device Notes10

Programming Notes10

Adding Functions to Modules10

 Commands to the device10

 Additional Feedback from the device11

Revision History

Date	Initials	Comments
10-09-11	DC	Initial release
01-04-14	DC	Increased inputs to accommodate additional models

Introduction


This is a reference manual to describe the interface provided between an AMX NetLinx system and a NEC P_SERIES projector. The required communication settings are a baud rate of 38400, 8 data bits, 1 stop bit, no parity, and handshaking off.

Overview

The COMM module translates between the standard interface described below and the **P_SERIES** serial protocol. It parses the buffer for responses from the projector, sends strings to control the projector, and receives commands from the UI module or telnet sessions.

A User Interface (UI) module is also provided. This module uses the standard interface described below and parses the string responses for feedback.

The following diagram gives a graphical view of the interface between the interface code and the NetLinx module.

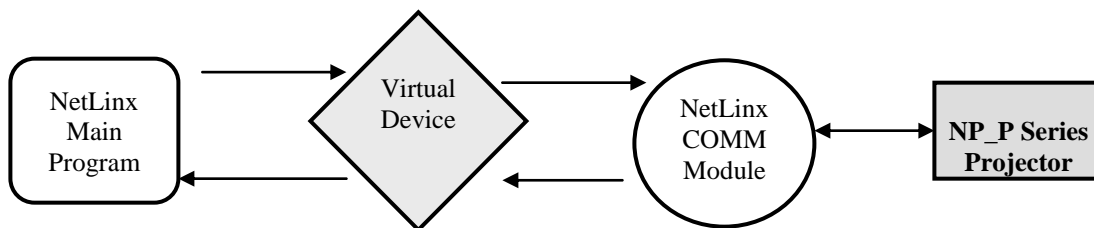

Implementation

To interface to the P_SERIES module, the programmer must perform the following steps:

1. Define the device ID for the P_SERIES that will be controlled.
2. Define the virtual device ID that the P_SERIES COMM module will use to communicate with the main program and User Interface. NetLinx virtual devices start with device number 33001.
3. The NetLinx P_SERIES module must be included in the program with a `DEFINE_MODULE` command. This command starts execution of the module and passes in the following key information: the device ID of the projector to be controlled, and the virtual device ID for communicating to the main program.

An example of how to do this is shown below.

```

DEFINE_DEVICE
  dvNP_P          = 5001:1:0    // The P_SERIES connected to the NetLinx on 1st RS-232 port
  OR
  dvNP_P          = 0:3:0      // The P_SERIES connected to the NetLinx via IP

  dvNP_P_TPI     = 10001:1:0   // The touch panel used for output

  vdvNP_P        = 33001:1:0   // The virtual device use for communication between the
                                // Comm module interface and User_Interface (UI) module interface

DEFINE_VARIABLE

DEFINE_START      // Place define_module calls to the very end of the define_start section.
// Comm module
DEFINE_MODULE 'NEC_NP_P_Comm' mdlNP_P_APP(dvNP_P, vdvNP_P)

```

Upon initialization the AMX Comm module will communicate with the NEC P_SERIES and information will be exchanged.

Command Interface

The UI module controls the projector via command events (NetLinx command *send_command*) sent to the COMM module. The commands supported by the COMM module are listed below.

Command	Description
ADDRESS=<value>	Sets the IP address for the projector <value>: valid IP address ADDRESS=192.168.1.200
ASPECT=<value>	Sets the current aspect ratio. <value>: 1 = AUTO 2 = WIDEZOOM 3 = CINEMA 4 = NATIVE 5 = 4:3 6 = 15:9 7 = 16:10 8 = LETTERBOX ASPECT=3: Turn aspect mode to CINEMA.
ASPECT?	Request for current aspect ratio. ASPECT?
AUTO=<value>	Directs projector to auto-adjust image. <value> : 1 = initiate auto adjust process AUTO=1
DEBUG=<state>	Set the debug state <state> : 0 OFF 1 ON DEBUG=1
DEBUG?	Request the debug state. DEBUG?

INPUT=<value>	<p>Selects the input source.</p> <p><value> : 1 = COMPUTER 1 2 = COMPUTER 2 3 = COMPUTER 3 4 = VIDEO 5 = S-VIDEO 6 = VIEWER 7 = NETWORK 8 = USB 9 = COMPONENT 10 = HDMI 11 = DISPLAY PORT</p> <p>INPUT=3</p>
INPUT?	<p>Request the current input setting.</p> <p>INPUT?</p>
MUTE=<value>	<p>Selects Picture mute mode.</p> <p><value> : 0 = Not Muted 1 = Muted</p> <p>MUTE=1</p>
MUTE?	<p>Request the current mute setting.</p> <p>MUTE?</p>
PASSTHRU=<string>	<p>Allows user the capability of sending commands directly to the P_SERIES without processing by the NetLinX module. User must be aware of the protocol implemented by the unit to use this command. This gives the user access to features which may not be directly supported by the module. See "Adding Functions to Modules" section at the end of this document for more information. The COMM module automatically adds the required checksum to the command string.</p> <p><string> : string to send to unit</p> <p>PASSTHRU=RVER</p>
POWER=<state>	<p>Sets the power state.</p> <p><state> : 0 power off 1 power on</p> <p>POWER=0</p>
POWER?	<p>Request the current power setting.</p> <p>POWER?</p>
REINIT=<value>	<p>Reinitialize communications with the projector</p> <p><value> : 1 = re-establish IP communication</p> <p>REINIT=1</p>

VERSION?	Request the current version number of the NetLinx module. VERSION?
----------	---

Table 1 – Send Command Definitions

String Feedback

The NetLinx COMM module provides feedback to the User Interface module for **P_SERIES** changes via string events. The strings supported are listed below.

String	Description
ASPECT=<value>	<p>Reports the current aspect ratio.</p> <p><value>: 1 = AUTO 2 = WIDEZOOM 3 = CINEMA 4 = NATIVE 5 = 4:3 6 = 15:9 7 = 16:10 8 = LETTERBOX 9 = ASPECT CHANGE ERROR - STATE UNKNOWN</p> <p>ASPECT=2:</p>
FILTERTIME=<value>	<p>Reports the filter hour usage in hours.</p> <p>FILTERTIME=30</p>
INPUT=<value>	<p>Reports the input source.</p> <p><value> : 1 = COMPUTER 1 2 = COMPUTER 2 3 = COMPUTER 3 4 = VIDEO 5 = S-VIDEO 6 = VIEWER 7 = NETWORK 8 = USB 9 = COMPONENT 10 = HDMI 11 = DISPLAY PORT</p> <p>INPUT=3</p>
LAMPTIME=<value>	<p>Reports the lamp hour usage in hours.</p> <p>LAMPTIME=99</p>
MUTE=<value>	<p>Reports the picture mute status.</p> <p>MUTE=1</p>
POWER=<value>	<p>Reports the power status.</p> <p><state> : 0 power is off 1 power is on 2 cooldown 3 warmup</p>

VERSION=<version>	Reports the current version number of the NetLinx module. <value> : current version number in xx.yy format VERSION=1.06
-------------------	---

Table 2 - String Feedback Definitions

Device Notes

Commands implemented by this interface include those that are commonly used and shared between various projector devices. Several of the P_SERIES commands have been omitted and may be executed using the PASSTHRU command.

A periodic poll will return the power state and the total number of hours used by the device. Should the projector shift into sleep mode, it will be automatically shifted back into power-on mode.

Programming Notes

The Main and UI modules are included for illustration purposes only. These are generic modules and the included COMM module may or may not support all of the features shown, and may support additional features that are not shown.

The COMM module imposes synchronous operation i.e. the COMM will not send a command to the P_SERIES until it has gotten a response or a timeout from the previous command.

A queue is implemented so that the commands from can be stacked. Commands are pulled off the queue (1) when a reply is received or, (2) after the reply timer times out (200 milliseconds). The device is polled every 10 seconds to return the power state and the input selected.

The Request commands return the state that is currently stored in the COMM module. They do NOT send a new Request to the device. The COMM module states are updated either by the periodic poll or by the enforced feedback. When a state changes, the UI is automatically informed.

Adding Functions to Modules

Commands to the device

This module supplies a mechanism to allow additional device features to be added to software using the module. This is the PASSTHRU command, which allows protocol strings to be passed through the module. The device-specific protocol must be known in order to use this feature.

As an example, suppose that a module for a projector has not implemented the 'white balance adjustment' feature. The command that the projector protocol requires is 03H, 10H, 05H, 14H, followed by a checksum. The documentation for the PASSTHRU command specifies that the module will automatically generate the checksum. In this case, the following string should be sent from the UI code to implement 'white balance adjustment'.

```
send_command vdvDevice,"PASSTHRU=',$03,$10,$05,$14"
```

The reason to use PASSTHRU instead of sending a protocol string directly to the device port is that the device may require command queuing, calculation of checksums, or other internal processing, which would not be done if the string was sent directly. Because of this, it is best to filter all communication TO the device through the module. (The module documentation will indicate any processing that will be automatically done to the PASSTHRU string like checksum calculation.)

Additional Feedback from the device

The module documentation indicates what feedback is provided. If additional feedback is required, a `CREATE_BUFFER` for the device must be implemented in the user code to process the strings from the device manually. Note that the module will still be processing the response strings independently and sending the interpreted feedback up to the user code.