



NetLinx Module Interface Specification

for a

Vivitek D5180HD family DLP Projector

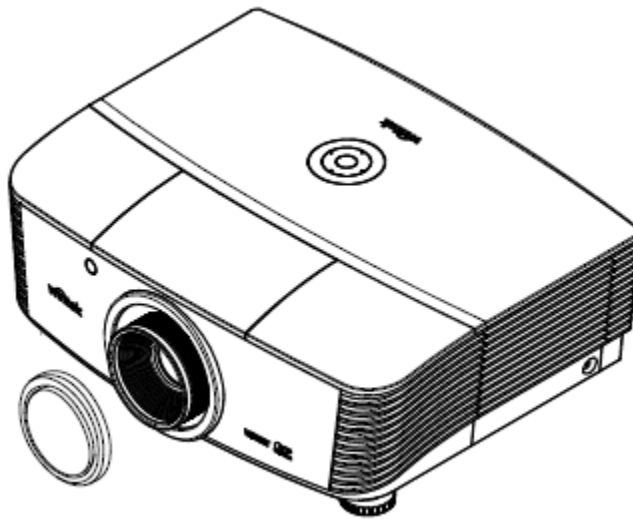


TABLE OF CONTENTS

- Introduction3
- Overview3
- Implementation3
- Channels4
- Levels4
- Command Interface6
- String Feedback8
- Device Notes9
- Programming Notes9
- Adding Functions to Modules9
 - Commands to the device9
 - Additional Feedback from the device10

Revision History

Date	Initials	Comments
10-06-12	DC	Initial release
07-21-13	DC	Added volume control and mute

Introduction


This is a reference manual to describe the interface provided between an AMX NetLinx system and a Vivitek D5180HD LCD projector. The required communication settings are a baud rate of 115200, 8 data bits, 1 stop bit, no parity, and handshaking off.

Overview

The COMM module translates between the standard interface described below and the **D5180HD** serial protocol. It parses the buffer for responses from the LCD, sends strings to control the LCD, and receives commands from the UI module or telnet sessions.

A User Interface (UI) module is also provided. This module uses the standard interface described below and parses the string responses for feedback.

The following diagram gives a graphical view of the interface between the interface code and the NetLinx module.

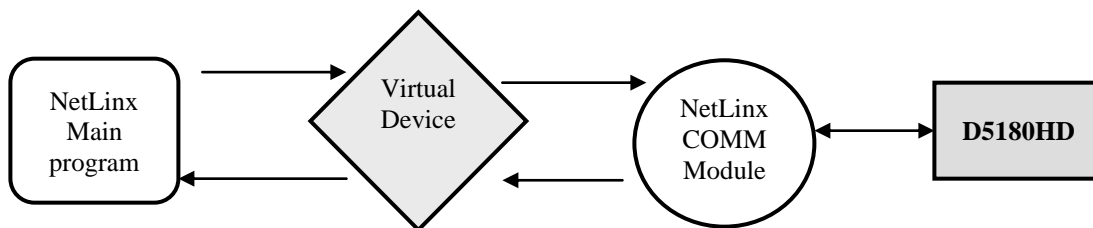

Implementation

To interface to the D5180HD module, the programmer must perform the following steps:

1. Define the device ID for the D5180HD that will be controlled.
2. Define the virtual device ID that the D5180HD COMM module will use to communicate with the main program and User Interface. NetLinx virtual devices start with device number 33001.
3. The NetLinx D5180HD module must be included in the program with a `DEFINE_MODULE` command. This command starts execution of the module and passes in the following key information: the device ID of the LCD to be controlled, and the virtual device ID for communicating to the main program.

An example of how to do this is shown below.

```

DEFINE_DEVICE
  dvD5180HD      = 5001:1:0    // The D5180HD connected to the NetLinx on 1st RS-232 port
  dvD5180HD TPI = 10001:1:0   // The touch panel used for output

  vdvD5180HD     = 33001:1:0  // The virtual device use for communication between the
                                // Comm module interface and User_Interface (UI) module interface

DEFINE_START    // Place define_module calls to the very end of the define_start section.
// Comm module
DEFINE_MODULE 'Vivitek_D5180HD_Comm' mdlD5180HD_APP(vdvD5180HD, dvD5180HD)

```

Upon initialization the AMX Comm module will communicate with the Vivitek D5180HD and information will be exchanged.

Channels

The channels supported by the COMM module are listed below. These channels are associated with the virtual device(s) and are independent of the channels associated with the touch panel device.

Note: An ‘*’ indicates an extension to the standard API.

Channel	Description
199	This channel is used for feedback only. ON: Device is Muted OFF: Device is Unmuted
251	This channel is used for feedback only. ON: Device is online. OFF: Device is offline.
255	This channel is used for feedback only. ON: POWER is ON. OFF: POWER is OFF

Levels

The UI module controls the video projector via level events (NetLinx command *send_level*) sent to the COMM module. The levels supported by the COMM module are listed below. These levels are associated with the virtual device(s) and are independent of the levels associated with the touch panel device.

Level	Description
1	Lamp-Hours used
2	Volume level 0-10 0 indicates muted

Command Interface

The UI module controls the LCD via command events (NetLinx command *send_command*) sent to the COMM module. The commands supported by the COMM module are listed below.

NOTE: AMX has not defined a standard API for LCD devices.

Command	Description
ASPECT=<value>	Sets the current aspect ratio. <value>: 0 = Auto 1 = 16:9 2 = 4:3 3 = Letter Box 4 = Real ASPECT=2: Turn aspect mode to 4:3.
ASPECT?	Request for current aspect ratio. ASPECT?
AUTO=<value>	Auto-adjust PC image <value>: 1 = Execute Auto-Adjust
DEBUG=<state>	Set the debug state <state> : 0 OFF 1 ON DEBUG=1
DEBUG?	Request the debug state. DEBUG?
INPUT=<value>	Selects the input source. <value> : 1 = RGB 2 = RGB2 3 = DVI 4 = Video 5 = S-Video 6 = HDMI 8 = Component 9 = DP INPUT=3
INPUT?	Request the current input setting. INPUT?
MUTE=<value>	Set Mute state <value> : 0=unmuted 1=muted

PASSTHRU=<string>	<p>Allows user the capability of sending commands directly to the D5180HD without processing by the NetLinx module. User must be aware of the protocol implemented by the unit to use this command. This gives the user access to features which may not be directly supported by the module. See "Adding Functions to Modules" section at the end of this document for more information.</p> <p>The COMM module automatically adds the required checksum to the command string.</p> <p><string> : string to send to unit</p> <p>PASSTHRU=RVER</p>
POWER=<state>	<p>Sets the power state.</p> <p><state> : 0 = off 1 = on</p> <p>POWER=0</p>
POWER?	<p>Request the current power setting.</p> <p>POWER?</p>
VERSION?	<p>Request the current version number of the NetLinx module.</p> <p>VERSION?</p>
VOLUME=<value>	<p>Sets the volume level</p> <p><value> : 1-10</p>

Table 1 – Send Command Definitions

String Feedback

The NetLinx COMM module provides feedback to the User Interface module for **D5180HD** changes via string events. The strings supported are listed below.

String	Description
ASPECT=<value>	<p>Reports the current aspect ratio.</p> <p><value>: 0 = Auto 1 = 16:9 2 = 4:3 3 = Letter Box 4 = Real</p> <p>ASPECT=2</p>
INPUT=<value>	<p>Reports the input source.</p> <p><value> : 1 = RGB 2 = RGB2 3 = DVI 4 = Video 5 = S-Video 6 = HDMI 8 = Component 9 = DP</p> <p>INPUT=3</p>
LAMPTIME=<value>	<p>Reports lamp usage in hours. (Updated every 5 minutes). Also available as level 1.</p>
POWER=<value>	<p>Reports the power status.</p> <p><value> : 0 power is off 1 power is on 2 cooldown 3 warmup</p> <p>POWER=3</p>
VERSION=<version>	<p>Reports the current version number of the NetLinx module.</p> <p><value> : current version number in xx.yy format</p> <p>VERSION=1.06</p>

Table 2 - String Feedback Definitions

Device Notes

Commands implemented by this interface include those that are commonly used and shared between various LCD devices. Several of the D5180HD commands have been omitted and may be executed using the PASSTHRU command.

A periodic poll will return the power state and the total number of hours used by the device. Should the LCD shift into sleep mode, it will be automatically shifted back into power-on mode.

Programming Notes

The COMM module imposes synchronous operation i.e. the COMM will not send a command to the D5180HD until it has gotten a response or a timeout from the previous command.

A queue is implemented so that the commands from can be stacked. Commands are pulled off the queue (1) when a reply is received or, (2) after the reply timer times out (200 milliseconds). The device is polled every 10 seconds to return the power state and the input selected.

The Request commands MAY return the state that is currently stored in the COMM module. They do NOT ALWAYS send a new Request to the device. The COMM module states are updated either by the periodic poll or by the enforced feedback. When a state changes, the UI is automatically informed.

Due to the lack of a mute API command that provides feedback, audio muting is implemented by turning the mute state on if the volume level is 0, and off if the volume is greater than 0. When the MUTE=1 command is received, the current volume level is saved and the volume is then set to 0. When unmuting, if the saved volume is also 0, it will be set to the midpoint (5).

Adding Functions to Modules

Commands to the device

This module supplies a mechanism to allow additional device features to be added to software using the module. This is the PASSTHRU command, which allows protocol strings to be passed through the module. The device-specific protocol must be known in order to use this feature.

As an example, suppose that a module for a projector has not implemented the 'white balance adjustment' feature. The command that the projector protocol requires is 03H, 10H, 05H, 14H, followed by a checksum. The documentation for the PASSTHRU command specifies that the module will automatically generate the checksum. In this case, the following string should be sent from the UI code to implement 'white balance adjustment'.

```
send_command vdvDevice,"PASSTHRU=',$03,$10,$05,$14"
```

The reason to use PASSTHRU instead of sending a protocol string directly to the device port is that the device may require command queuing, calculation of checksums, or other internal processing, which would not be done if the string was sent directly. Because of this, it is best to filter all communication TO the device through the module. (The module documentation will indicate any processing that will be automatically done to the PASSTHRU string like checksum calculation.)

Additional Feedback from the device

The module documentation indicates what feedback is provided. If additional feedback is required, a CREATE_BUFFER for the device must be implemented in the user code to process the strings from the device manually. Note that the module will still be processing the response strings independently and sending the interpreted feedback up to the user code.